

TRUCK-LOCK™ SERIES
ATL-450

Low Profile Automatic
Vehicle Restraint

Owner's Manual

This manual applies to ATL-450 series restraints manufactured on or after 2013/06/01 with serial numbers 25005 and greater.

P/N: 59-0007-P

NORDOCK INC.

Website: nordockinc.com ~ Email: sales@nordockinc.com ~ Toll free: 866-885-4276
Nordock Inc. reserves the right to make changes to specifications without notice or obligation. Nordock products may be covered by various U.S. and foreign patents or pending application.

Contents

Contents	1
Preface	2
Problems, Errors and Omissions	2
Restraint Identification	2
Copyright	2
Warranty	3
Safety Practices	4
Labels	5
Installation	6
Mounting Requirements.....	7
Tools Required	7
Installation with Pit Type Levelers.....	8
Installation of Optional Driveway Mounting Plate.....	14
Operating Procedure	16
To Hitch Truck:	16
To Release Truck:	17
Troubleshooting.....	18
Restraint Operating Function Check.....	18
Maintenance Schedule.....	21
Acceptable Lubricants and Oils	22
Hydraulic.....	22
Grease.....	22
Parts Replacement.....	23
Removing Hook From Track.....	23
Re-installing Hook Into Track.....	23
Wiring Diagram.....	24
Parts List	25

Preface

PLEASE READ AND UNDERSTAND THIS MANUAL COMPLETELY

This manual gives detailed information and instruction on how to operate and maintain your equipment correctly. Failure to do so could result in personal injury, and/or equipment damage. Please consider this manual a permanent part of the unit and keep it near the restraint for reference whenever needed.


If you have any questions about this manual, the restraint, its components, or our products and services, please call us at 1-866-885-4276 and we will be happy to assist you. With proper care and maintenance, this restraint is designed to work effectively and efficiently for many years to come.

Problems, Errors and Omissions

This manual has been prepared with the utmost care and attention to detail to provide accurate parts and service information should the need arise. Nordock Incorporated believes this manual will provide the operators of this restraint all the necessary information required to operate and maintain it for many years. If you believe there is an error, if you have a problem following the guidelines, or if there is information that you feel is missing from this manual, please contact us at the above number so that we may resolve the issue immediately.

Restraint Identification

It is very important that in order to obtain the best possible service from Nordock Inc., please provide the model and serial number of the restraint whenever you contact us. Below is the same serial number decal that will be found on the left hand hook side plate (standing outside facing the restraint). Please record the information from the decal on the restraint in the area below. This will greatly reduce the possibility of improper parts being shipped to you.

		Phone 866-885-4276 www.nordockinc.com
Model:	<input type="text"/>	
Capacity:	<input type="text"/>	
Product may be covered by various U.S. and foreign patents or pending applications		



Copyright

This manual is copyright to Nordock Incorporated. All information, text, drawings, and technical data contained herein are for reference only. No part of this manual may be copied, altered, or stored on electronic media, and cannot be revealed to others for the purpose of competition.

Warranty

Nordock Inc. expressly warrants that the Model ATL-450 Vehicle Restraint shall remain free of defects in material and workmanship under normal use for One-Year from the date of delivery to the purchaser. The purchaser must maintain & operate the product in accordance with proper procedures. In the event the product proves defective in material or workmanship, Nordock Inc. will at its option within the first year either:

1. Replace the product or the defective without charge to the purchaser; or,
2. Alter or repair the product on site or elsewhere, as Nordock Inc. may deem advisable, without charge to the purchaser.

In addition to the above, the structural components are covered by an extended Five-Year period. In the event a structural component proves defective in years two through five, Nordock will provide a replacement part at no charge. Nordock Inc. is responsible for the cost to ship and install the replacement part during this extended period.

The warranty stated herein is that offered by Nordock Inc. and expressly disclaims all implied warranties including those of merchantability and fitness. This warranty does not cover any failure caused by improper installation, misapplication, overloading, abuse, negligence, or failure to do prescribed maintenance and protect the equipment from vehicle impact. Nordock Inc. or its representative assume no responsibility or liability for any incidental or consequential damages of any kind including loss of use of any equipment, damage or failure resulting from the use of unauthorized replacement parts or equipment modification, or damages resulting from the misuse of the equipment.

Nordock Inc. warranties extend only to the product itself. Nordock Inc. disclaims all liability of any kind arising out of the workmanship, methods and materials used by the installer or premature product wear, product failure, property damage or bodily injury arising from improper installation.

These warranties as stated herein are the exclusive remedies for all claims.



Safety Practices

The operators of this unit must read these safety practices before installing, operating or servicing the TRUCK-LOCK™. Failure to follow these safety practices may result in bodily injury, property damage or death.



WARNING

READ AND FOLLOW THE OPERATING INSTRUCTIONS CONTAINED IN THIS MANUAL BEFORE OPERATING THE TRUCK-LOCK™. If you do not understand the instructions, contact your supervisor for explanation and instruction on the safe operation of this unit.

Improper installation of the TRUCK-LOCK™ could result in serious injury or death to dock workers or other users of the restraint.

The following guidelines are to be used in conjunction with all laws, governances and codes in effect where the TRUCK-LOCK™ is installed.

1. Use by untrained people can cause property damage, serious injury and/or death. Your supervisor should instruct you on the safe and proper way to use the TRUCK-LOCK. Read and follow the complete OPERATING procedure on page 15 before use.
2. DO NOT USE THE TRUCK-LOCK IF IT IS NOT WORKING RIGHT. Tell your supervisor it needs repair.
3. Be certain all people in the driveway stand clear when the TRUCK-LOCK is being operated.
4. Do not stand in the driveway between the dock and a backing truck.
5. Keep all body parts clear of restraint guide tracks and moving parts at all times.
6. Do not install the TRUCK-LOCK anchor bolts into concrete of questionable integrity.
7. Do not load or unload any truck until you make certain that the TRUCK-LOCK has securely engaged the truck's ICC bar and the brakes are set. If the TRUCK-LOCK does not hitch the truck's ICC bar for any reason, BE CERTAIN TO CHOCK THE TRUCK WHEELS BEFORE PROCEEDING WITH LOADING OR UNLOADING.
8. Do not use the TRUCK-LOCK as a step.
9. All electrical troubleshooting and repair must be done by a qualified technician and must meet all applicable codes. Before doing any electrical work, make certain the power is disconnected and properly tagged or locked out.


Installation



WARNING

IMPROPER INSTALLATION OF THIS TRUCK-LOCK COULD RESULT IN SERIOUS INJURY OR DEATH TO DOCK WORKERS OR OTHER RESTRAINT USERS

A typical TRUCK-LOCK restraint installation is shown below:

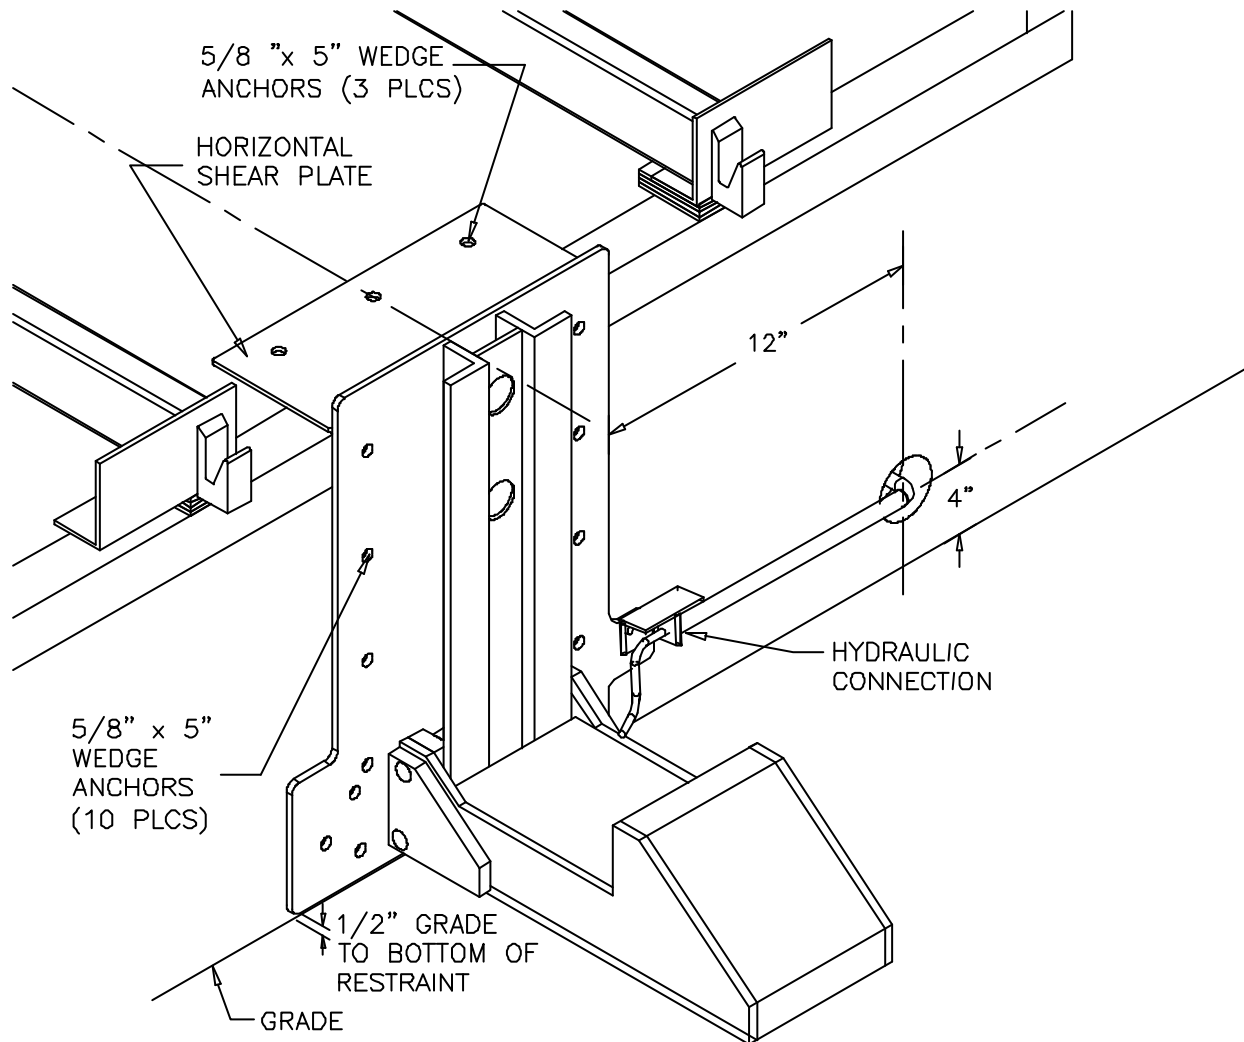

The following installation materials are included with the restraint:

- 13 pcs. 5/8" x 5" concrete wedge anchors
- 1 pc horizontal shear plate
- 1 pc pre-wired weatherproof junction box

All other materials required are to be provided by the installer.

Mounting Requirements

1. The dock face on which the TRUCK-LOCK is to be mounted must be flat and vertically plumb for correct operation. If the dock face is not flat, it may be necessary to use shims behind the backplate of the restraint or to modify the dock face to provide a flat mounting surface. If shimming is required, it is necessary to place shims at all of the anchor hole locations where the backplate does not contact the wall. This will prevent distortion of the backplate when the anchors are tightened.
2. The TRUCK-LOCK vehicle restraint requires a 4" bumper projection from the front of the bumper to the rear of the back plate of the restraint. Less than 4" of projection can allow trailer ICC bars to damage the restraint.
3. Some types of dock levelers that use lip saddles may interfere with the TRUCK-LOCK vehicle restraint. Depending upon the lip length, dock height, bumper projection, use of standoffs etc., modification to the restraint and/or dock leveler may be required. Consult the factory for specific applications.
4. The standard concrete anchors (5/8" x 5" wedge style) provided with this restraint may only be used on docks constructed of solid concrete. Docks constructed of other materials require special mounting considerations. Refer to the end of this section for optional driveway plate mounting. Contact your local Nordock distributor for application specific information.
5. A 3/8" gap is required between the dock leveler front angle and the pit floor for installation of the horizontal shear plate.
6. Do not install the TRUCK-LOCK anchor bolts into concrete of questionable integrity.
7. If the driveway beneath the TRUCK-LOCK is affected by frost, additional clearance between the TRUCK-LOCK and the driveway may be required to prevent damage due to heaving.

Tools Required



- Welder
- Hammer drill with 5/8" diameter masonry bit
- 15/16" Wrench
- General hand tools
- Touch up paint (Silver)
- Torque wrench (100 ft-lbs. min.)
- 5/8" Wrench

Installation with Pit Type Levelers

1. Place barricades around pit on dock floor and driveway while installing the TRUCK-LOCK.
2. The horizontal shear plate **MUST BE INSTALLED** to achieve the full rated restraining capacity of the TRUCK-LOCK.

The installation method for the horizontal shear plate will depend upon the height of the front curb steel off grade and if there is a sufficient gap under the dock leveler front angle.

The diagrams below illustrate acceptable shear plate mounting methods for the most common types of restraint installations.

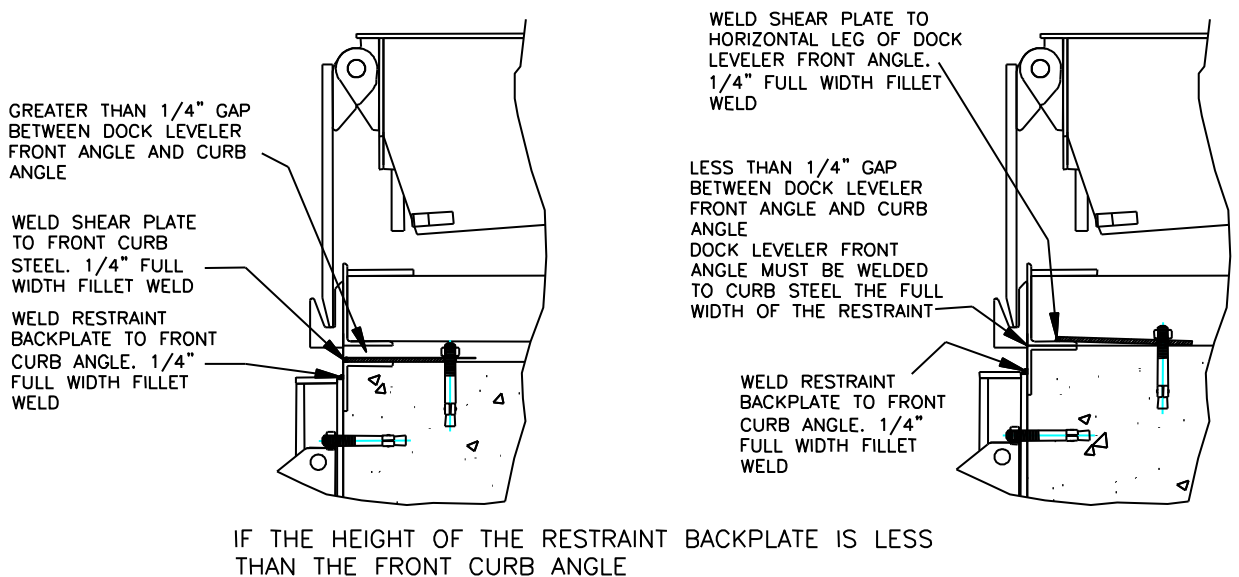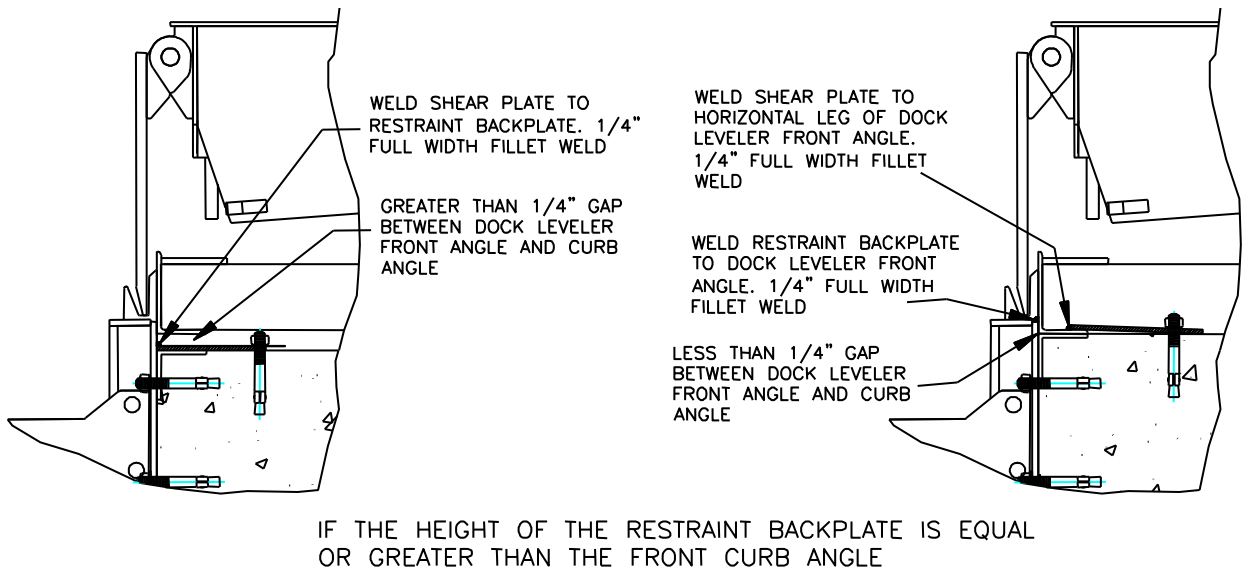

Please consult the factory if your particular site conditions prohibit installation of the shear plate using the above methods.

 **WARNING**


ALWAYS USE DOCK LEVELER MAINTENANCE SUPPORT WHEN WORKING UNDER A DOCK LEVELER RAMP OR LIP

3. If there is sufficient clearance, insert the horizontal shear plate into the gap between the dock leveler front angle and the pit floor.

Otherwise use one of the methods illustrated on the previous page.

4. Place the bottom of the TRUCK-LOCK 1/2" above the driveway and centre it with the dock leveler pit.
 - a. If the horizontal shear plate is above the top of the backplate, weld the full width of the shear plate to the dock leveler front angle. If there is no dock leveler front angle (clean frame design), weld the full width of the shear plate to the front pit curb angle.
 - b. If the horizontal shear plate is level with or below the top of the backplate, tack the shear plate to the backplate at both ends. Pull the restraint and shear plate away from the dock and weld the full width of the plate on the topside using a 1/4" fillet. Refer to adjacent diagram.

Paint welded areas to prevent rust.

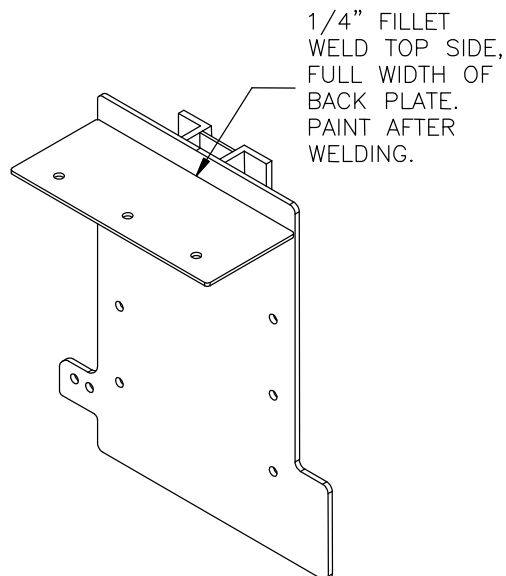

5. Slide the TRUCK-LOCK and shear plate back into position.
6. Before anchoring the TRUCK-LOCK, operate the dock leveler through its full range of motion.
 - a. Check that the TRUCK-LOCK does not interfere with the below dock operation and that the dock leveler lip does not come to rest on the TRUCK-LOCK in such a way that it supports the weight of the dock leveler.
 - b. In the full below dock position, check that the pendant dock leveler lip does not project beyond the face of the bumpers when it is resting on the top of the restraint.




WARNING

Improper installation that allows the pendant dock leveler lip to support the weight of the dock leveler could result in serious injury or death. It is sometimes necessary to install lip deflector plates to prevent the possibility of the pendant lip storing on top of or behind the restraint backplate.

An optional bolt-on lip deflector plate is available for use with this restraint. It is shown in the diagram below. If the optional deflector is insufficient to prevent the dock leveler lip from resting on top of or in behind the restraint, the installer must provide additional steel.

If the optional deflector plate interferes with the storing of the dock leveler lip, it may be removed.

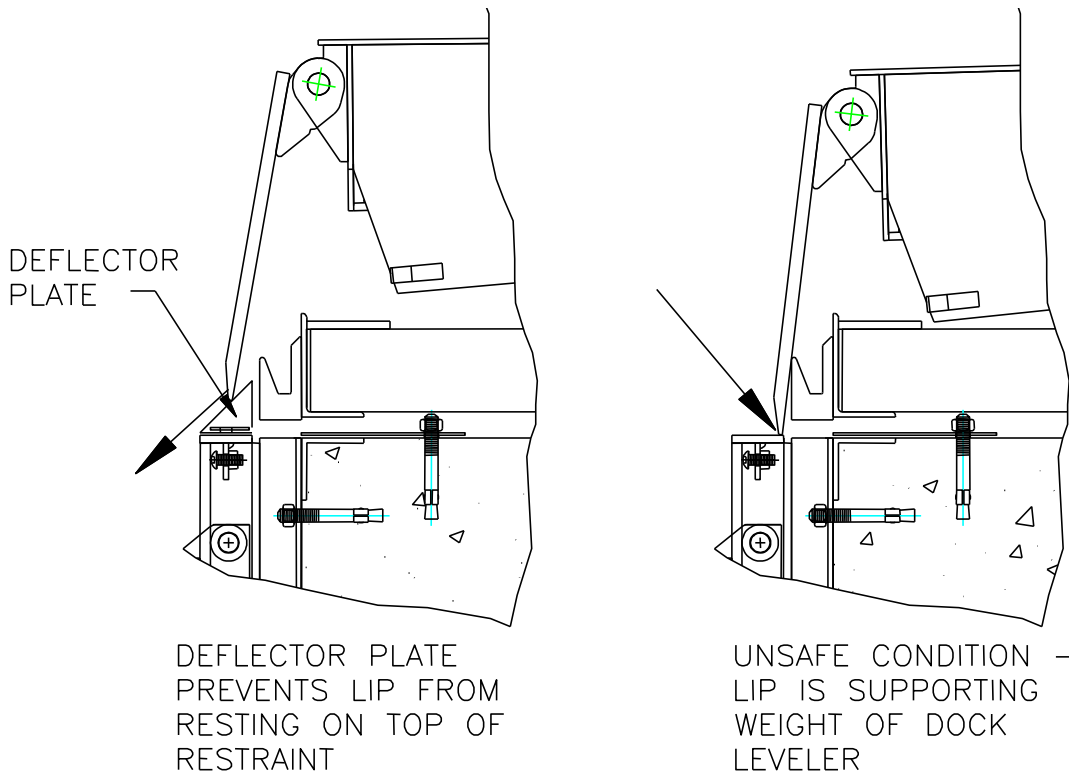

- Anchor the TRUCK-LOCK backplate to the dock face using the wedge anchors provided. The anchor bolts must be torqued to 90 ft-lbf to achieve maximum holding strength.

NOTE

Anchors must be installed in a minimum of six (6) back plate-mounting holes. The anchors should be installed as the holes are drilled to prevent the TRUCK-LOCK from shifting.

- Anchor the shear plate to the pit floor using the concrete anchors provided. The anchor bolts must be torqued to 90 ft-lbf to achieve maximum holding strength.


⚠ WARNING

Before doing any electrical and hydraulic work, the power must be disconnected and properly locked/tagged off. Failure to do so could result in death or serious injury. All electrical and hydraulic work must meet all applicable codes and be carried out by a qualified technician.

NOTE


The control voltage for this restraint is 24 VDC. All motor power wires or other high voltage wires should be run in a separate conduit.

9. Mount the control box inside the building, to the left of the doorway, 4 ft. above the floor. Refer to diagram below.

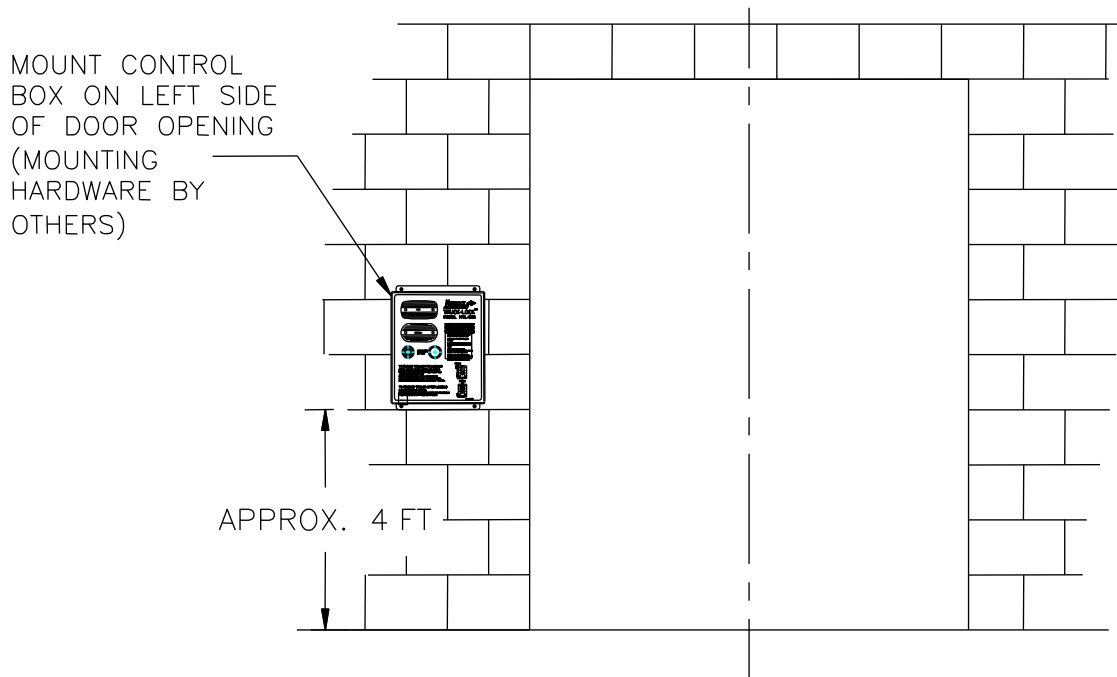

10. The outside signal light is to be placed approximately 9 ft above the driveway on the driver's side of the door opening as shown in the diagram on the next page. Drill a hole through the wall at the centre of the signal light mounting position.

11. Run a length of 16/3 electrical cable (not supplied) from the control box location through the wall. Make connections in panel and signal light assembly as indicated in the wiring diagram located at the back of this manual.

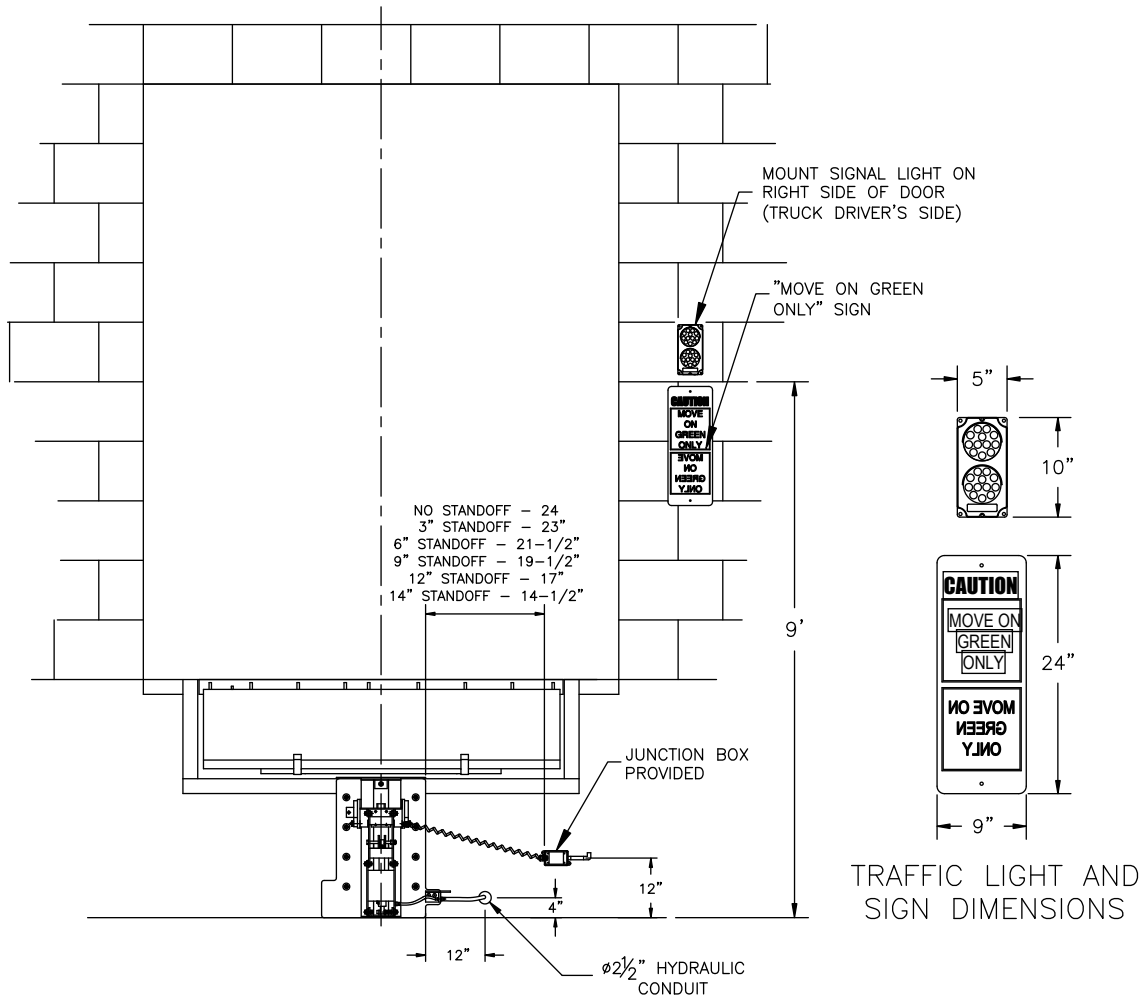

12. Fasten the signal light housing to the wall.
13. Mount the "Move On Green Only" sign provided to the exterior wall under the signal light as shown in the diagram above.
14. Mount the supplied electrical junction box to the exterior wall adjacent to the restraint in the location shown in the diagram above.
15. Run a length of 18/2 electrical cable (not supplied) from the control box to the exterior junction box. Make connections inside the control box and junction box as indicated in the wiring diagram located at the back of this manual.
16. If this installation includes an optional dock leveller "stored" limit switch, wire in the normally closed contact. This will prevent the restraint from being released until the dock leveler is stored.
17. Bring 110/1/60 power to panel and wire according to the diagram located in the control panel. **DO NOT APPLY POWER AT THIS TIME.** Running the pump without oil can cause permanent damage.
18. Cap both ends of the 16' length of 1/4" hydraulic hose (supplied) with the restraint.

19. Route the hose through conduit from the control box to the bulkhead hose connection on the restraint back plate.
20. Clip the hose to the wall as necessary to prevent any tension on the hose ends.
21. Connect one end of the hose to the control box port.
22. Connect the other end of the hose to the bulkhead fitting on the backplate hose-mounting bracket.
23. Tighten all connections.
24. Remove the filler cap from the hydraulic pump reservoir.
25. Using the supplied hydraulic oil, fill the reservoir to the top. Leave the filler cap off, as oil will need to be added while the pump is running.
26. Apply power to the control panel.
27. The outside light should be flashing green and the inside light solid red. If the lights are not on or not as described, verify power and all field wiring connections.
28. Press and release the "LOCK" button. The pump will turn on and the outside light will change to flashing red. If the pump does not turn on, verify that the restraint sensor bar is not deflected. If the sensor bar is not deflected, then the field wiring between the restraint sensor and the control box needs to be verified.
29. After the pump runs for several seconds, the hook will slowly start to rise. The motion will be "jerky" at first due to the air in the line. This is normal.
30. As the hook raises and the accumulator charges, the oil level in the reservoir will drop significantly. Add oil as the motor is running to keep the reservoir approximately 1/2 full.
31. The pump will shut off automatically when the pressure reaches a preset value.
32. Turn the "RESTRAINT BYPASS" switch to OFF. The inside light will change to solid red and the exterior light will flash green. If equipped with the optional alarm, turn the switch to OFF when the alarm sounds.
33. Check for oil leaks at all hose connections.
34. Press the "RELEASE" button to store the hook.
35. Add hydraulic oil as necessary to bring the fluid level up to the "MAX" line on the side of the reservoir.
36. Replace filler cap on hydraulic oil reservoir.
37. Operate the TRUCK-LOCK control box "LOCK" and "RELEASE" pushbuttons several times to release any remaining air that is trapped in the system.

38. Verify that the hook raises and lowers smoothly.
39. Verify correct operation as follows:
 - a. One light must be on, both interior and exterior at all times.
 - b. With the restraint in the stored position, the exterior light will flash GREEN and the interior light will turn RED.
40. If the lights do not operate as described, there is a field-wiring problem. Turn off the power and check the wiring per the Wiring Diagram at the back of this manual. Rewire as required.
41. Instruct the dock workers how to correctly use the TRUCK-LOCK. The Operating Procedure can be found in the next section.

Installation of Optional Driveway Mounting Plate



When the optional driveway mounting plate is used, the driveway material must be concrete. For driveway materials other than concrete, a stepped concrete pad must be poured as shown next page. Allow concrete to properly cure before installing restraint.

Place plate on driveway or concrete pad.

Place bottom of TRUCK-LOCK on the driveway plate. Keep both the TRUCK-LOCK and driveway plate centered with the dockleveler pit.

Make sure the horizontal shear plate is welded to the restraint back plate as previously noted in Installation Instruction 4a and b.

Weld the bottom of the TRUCK-LOCK back plate to the driveway plate, as shown on next page. Paint welded areas to prevent rust.

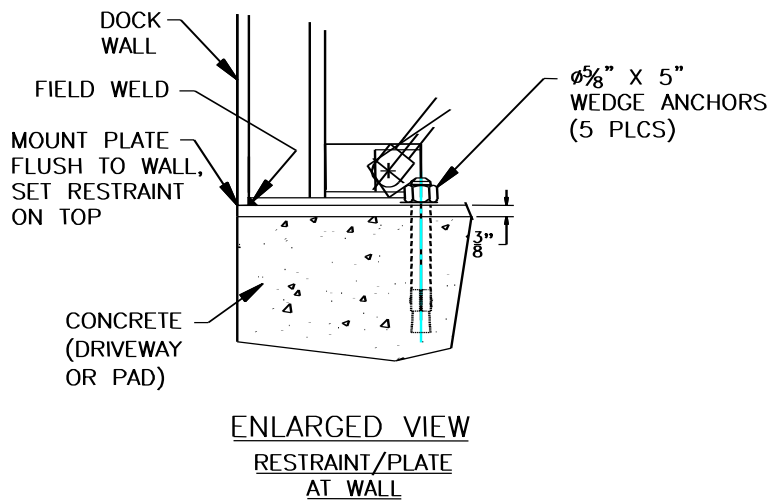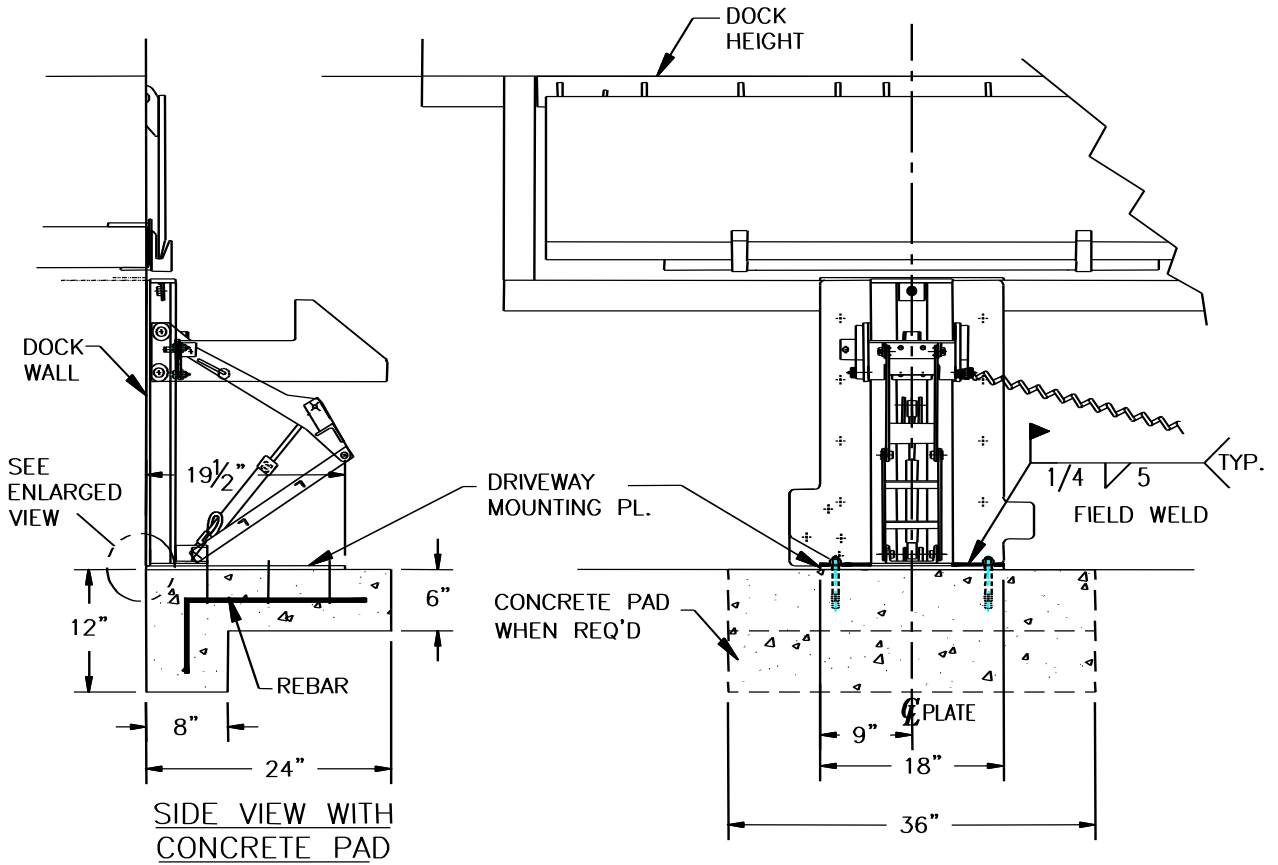

Operating Procedure



WARNING

Before operating or maintaining this truck restraint, read and follow the safety practices contained in this manual. Failure to follow the guidelines in this manual and those in effect in the workplace can result in serious bodily harm and equipment damage.

*Do not load or unload any truck unless you make certain the TRUCK-LOCK has securely engaged the truck's ICC bar and that the truck brakes are set. If the TRUCK-LOCK does not engage the truck's ICC bar for whatever reason, **THE TRUCK'S WHEELS MUST BE CHOCKED BEFORE LOADING OR UNLOADING CAN BEGIN.***

Failure to store the TRUCK-LOCK when not in use could result in damage to the TRUCK-LOCK and incoming trucks.


To Hitch Truck:

(Initial conditions: – hook stored – outside light flashing green – inside light red)

1. Press and release the “LOCK” button. The hook will raise to engage the truck's ICC bar.
2. The outside traffic light will change to flashing red. If the sensor bar is deflected by the truck's ICC bar as the hook rises, the inside light will change to GREEN.


VISUALLY CHECK ICC bar engagement.

3. If the sensor bar is not deflected, the inside light will remain RED. If equipped, the alarm will sound.
4. Secure the trailer by chocking the wheels on BOTH sides.
5. Silence the alarm and change the inside light to GREEN by turning the RESTRAINT BYPASS” selector to the “ON” position
6. The dock leveller can now be used to load/unload the truck.

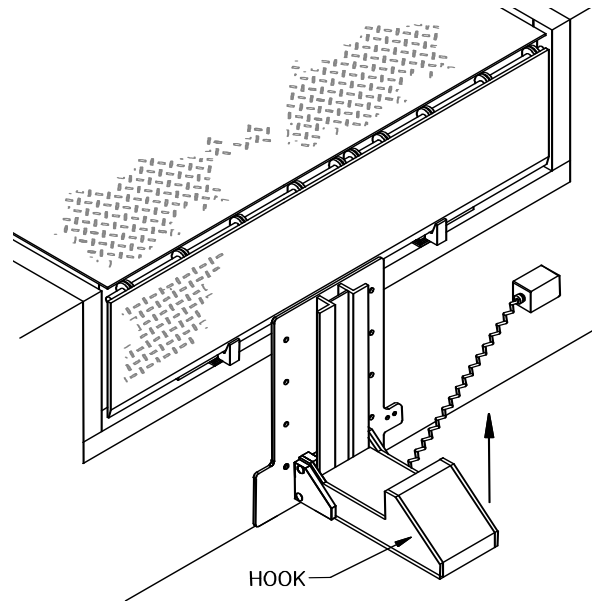

To Release Truck:

1. Ensure the dock leveler is stored.
2. The “RESTRAINT BYPASS” selector must be turned to the “OFF” position before the hook can be released.
3. Press the “RELEASE” button. The hook will disengage and begin to lower to its stored position.
4. The interior light will switch to a solid red.
5. Once the hook has lowered sufficiently that the sensor bar is no longer depressed, the outside light will change to a flashing GREEN.
6. **VISUALLY CHECK** that the hook is in the fully lowered position.
7. The truck may now pull out.

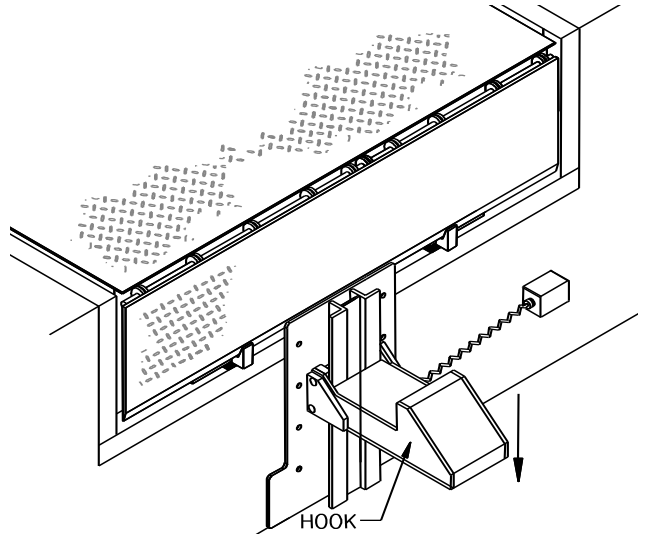

Troubleshooting

Restraint Operating Function Check

Initial Conditions:

- “RESTRAINT BYPASS” in the OFF position.
- Hook stored – Inside solid red light – Outside light flashing green.

Press the LOCK pushbutton:

- The inside red light will remain on and the hook will raise.
- The outside light will change to flashing red.
- The cylinder will extend fully and the pump will shut off at 1000 psi.
- If the sensor bar is deflected before the pump shuts off, the inside light will change to a solid green.
- If the sensor bar is not deflected, the inside light will remain red. If equipped with the optional alarm, alarm will sound.

Turn the “RESTRAINT BYPASS” selector switch to the “ON” position:

- The hook will remain in the raised position with the inside light showing solid green.
- If equipped with the optional alarm, the alarm will silence.

Press the RELEASE pushbutton:


NOTE: The “RESTRAINT BYPASS” selector must be in the “OFF” position before the hook can be released.

- The inside light will turn red.
- The hook will lower to the stored position.
- The outside light will change to green, once the hook clears the ICC bar.

NOTE:

- Visually check to make sure the hook has fully lowered before instructing truck driver to leave.

Troubleshooting

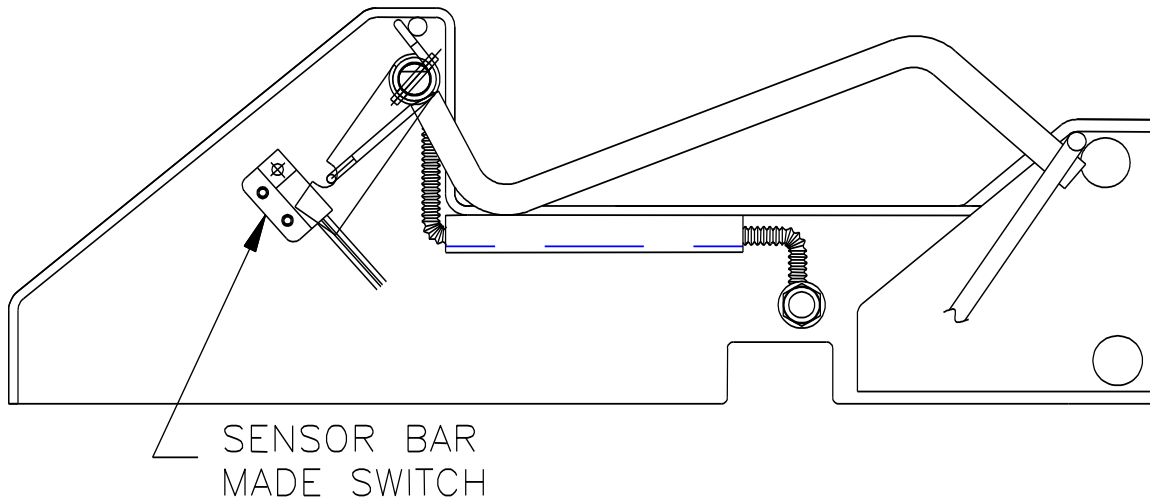


<u>PROBLEM</u>	<u>CAUSE</u>	<u>CORRECTIVE ACTION</u>
No interior or exterior signal lights.	1.No power to panel.	Check that power is coming into control panel.
	2 Control panel fuse blown.	Check fuse and replace as necessary.
Interior light stays solid red even when hook sensor bar is deflected.	Control panel not “seeing” change of state in sensor bar switch.	<ol style="list-style-type: none"> 1. Manually deflect sensor bar and verify that trigger plate passes within 1/4” of round sensing zone. 2. Check for missing or damaged sensor bar made switch. 3. Check continuity of sensor bar made switch wiring to control panel. 4. If wiring checks out OK, place a piece of steel against switch sensing face. If lights do not change, replace switch.

<u>PROBLEM</u>	<u>CAUSE</u>	<u>CORRECTIVE ACTION</u>
Motor runs but hook does not raise.	1.Solenoid valve not closing.	Check that coil is magnetizing.
	2 Low hydraulic oil level in reservoir.	Add fluid as necessary.
	3 Hydraulic oil leak.	Check all hoses and fittings and inside control panel. Replace or repair as necessary.
Motor runs, hook raises but will not lower or lowers very slowly. OR Hook raises only partially and then motor shuts off.	Hook jamming in track.	Check track for debris and that the rollers are not binding.
Motor does not run – inside and outside lights still work.	Blown 12A control fuse F2.	Check & replace if necessary.
	Bad motor power relay.	Check & replace if necessary.
	Bad motor.	Check & replace if necessary.
Hook drifting down.	External - Hydraulic oil leak	Inspect all fittings and hose connections and repair as necessary
	Internal – Hydraulic oil leak	Check breather in hook cylinder for signs of oil leakage

Maintenance Schedule

⚠ WARNING

Before servicing this restraint, read and follow the safety practices contained in this manual. Failure to follow the guidelines in this manual and those in effect in the workplace can result in serious bodily harm and equipment damage.

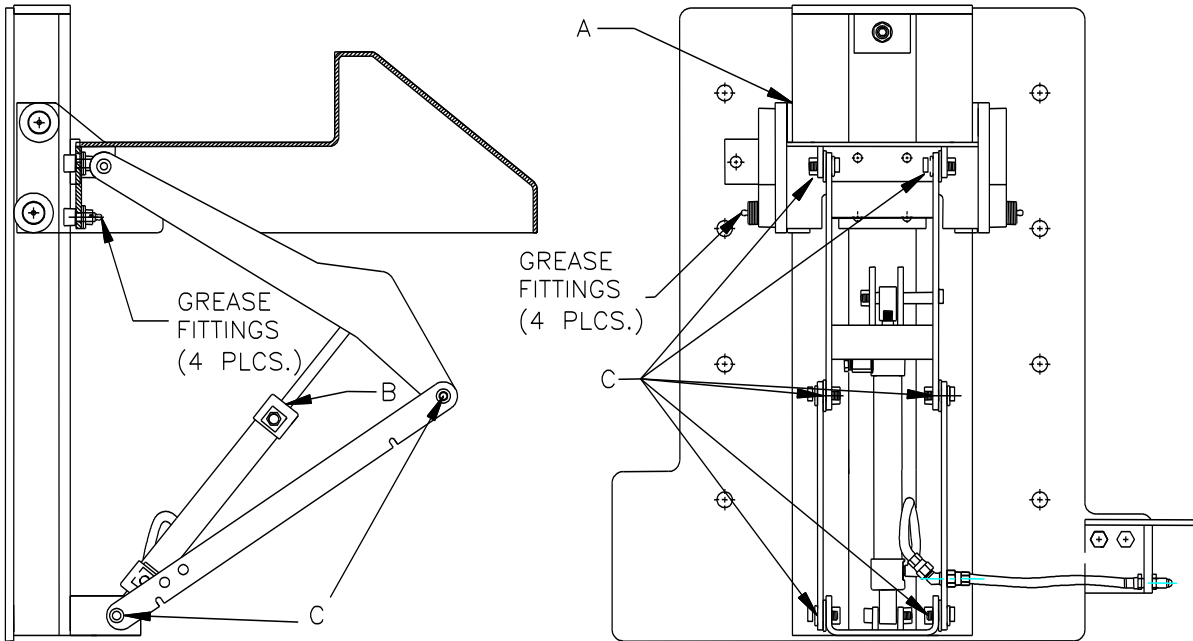

Item	Lubrication	Inspection	Cleaning
Grease Fittings (8 locations)	Every 90 days Using MP grease	None	Remove debris as required
- A - Track & Rollers	None required	Weekly – Check for bent track or damaged rollers	Remove debris as required
- B - Cylinder	None required	Monthly – Check for leaks	Remove debris from rod as required
- C - Pivot Points (6 locations)	None required	Monthly – Check for loose fasteners- tighten as required	Remove debris as required
Driveway Area Around Restraint	None required	None	As required to remove debris
Signal Lights Interior & Exterior	None required	Daily check that all bulbs are working	Clean lenses as required
Concrete Anchors (11 locations)	None required	Weekly check that all anchors are tight. Re-tighten if necessary	None required
Hydraulic Oil on motor/pump unit in control box	Yearly – change hydraulic oil	Monthly - Check fluid level on hydraulic pump in control box	None required
Hydraulic Hoses & Fittings	None required	Monthly – all hoses, fittings and inside control box for evidence of leakage	Clean up oil as necessary and repair leaks

Acceptable Lubricants and Oils

Hydraulic

Oils used in the hydraulic system must meet minimum ISO grade 22 standard. E.G.:

COMMERCIAL OIL MULIT-VIS MV22
MOBIL AERO HFA (49011)
EXXON UNIVIS GRADE J13
TEXACO AIRCRAFT OIL #1537BB
U.S.OIL CO. #5606 (LOW TEMP)
SHELL TELLUS T22

Grease

Grease must be CHEVRON RPM Arctic grease EP NLGI 1 (GC-LB) or equivalent

Parts Replacement



WARNING

Before servicing this restraint, read and follow the safety practices contained in this manual. Failure to follow the guidelines in this manual and those in effect in the workplace can result in serious bodily harm and equipment damage.

Always replace traffic light bulbs with 28VDC, #2233 bulbs or equivalent. Using 12V automotive type bulbs, such as a #1156 will cause damage to the control panel components that will not be covered under warranty.

NOTE

Before removing the stop plate from the top of the track, ensure that the hook is not under pressure against the bottom of it. This will help avoid pinching fingers or other body parts.

Removing Hook From Track

If the hook has to be removed to replace damaged or worn parts, the following procedure must be used to avoid personal injury.

1. Press the "LOCK" pushbutton to allow the hook to start to raise.
2. Remove power once the hook is almost to the top of its travel.
3. Lock-Out and Tag the power OFF at the disconnect supplying the control panel.
4. Unscrew retaining bolt from front of track and remove stop plate.
5. Block up the restraint hook to support its weight when the cylinder is removed.
6. Remove the 5 ½" long upper cylinder bolt and jam nut.

NOTE


Do not use a pry bar on the cylinder rod as it may damage the surface causing premature failure of the cylinder.

7. Once the rod end of the cylinder has been disconnected, the hook can be lifted out of the track and lowered to the ground in front of the back-plate without disconnecting any of the linkages.


Re-installing Hook Into Track

1. Lower hook back into track and block up at a height so that the cylinder may be re-installed easily.
2. Position the cylinder end block between the upper mounting brackets. From the left side of the arm assembly, reinsert the 5 ½" long bolt through the brackets and cylinder end, replacing the jam nut and nut.
3. Re-install stop plate and retaining bolt.
4. Turn on power to the control panel and press "RELEASE" to store the hook.

Wiring Diagram

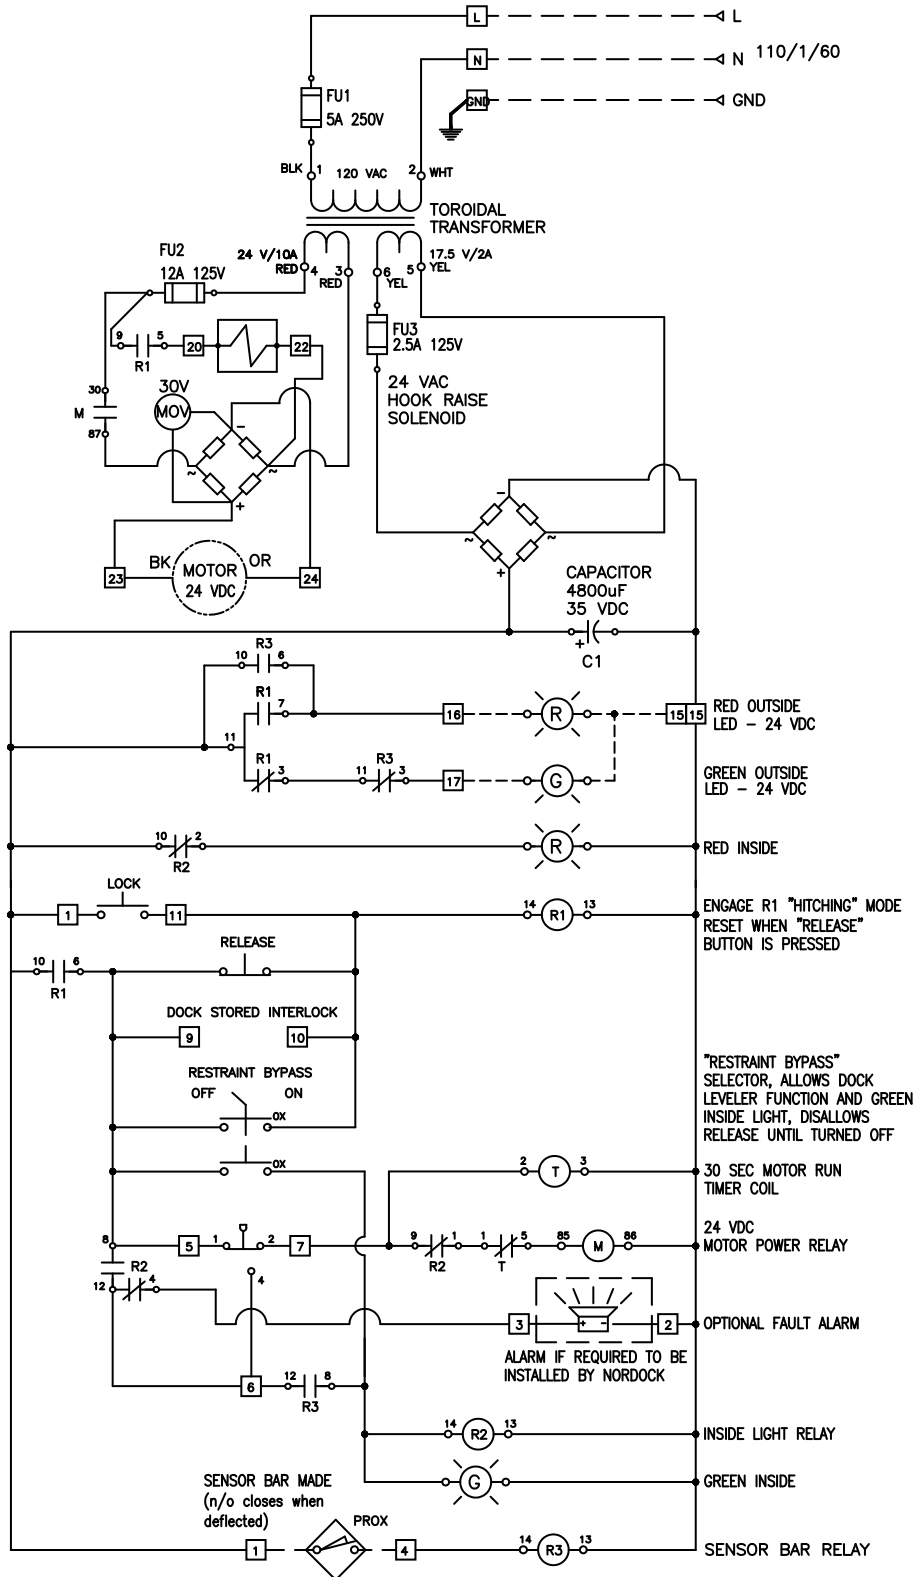

--- FIELD CONNECTIONS (BY OTHERS)




 


DOCK LEVELER INTERCONNECT CLOSSES WHEN INSIDE LIGHT IS GREEN CONTACT RATING 5A @ 250VAC (RESISTIVE)

DESCRIPTION OF INTERLOCKS

DOCK LEVELER STORED INTERLOCK
 - TERMINALS 9 & 10 ARE USED
 - WIRE IN N/C CONTACT THAT OPENS WHEN THE DOCK LEVELER IS STORED
 - THIS WILL PREVENT THE RESTRAINT FROM BEING RELEASED UNTIL THE DOCK LEVELER IS STORED

Parts List

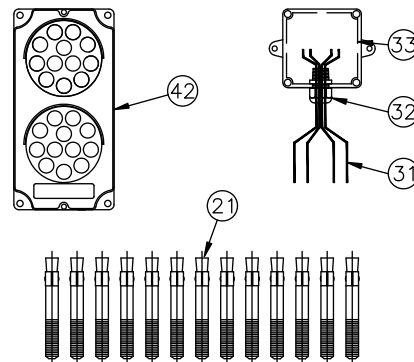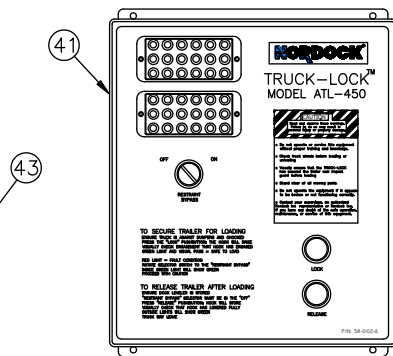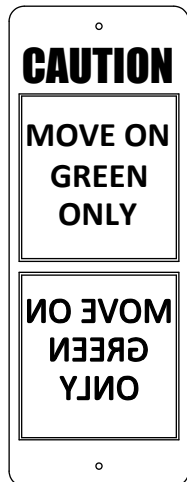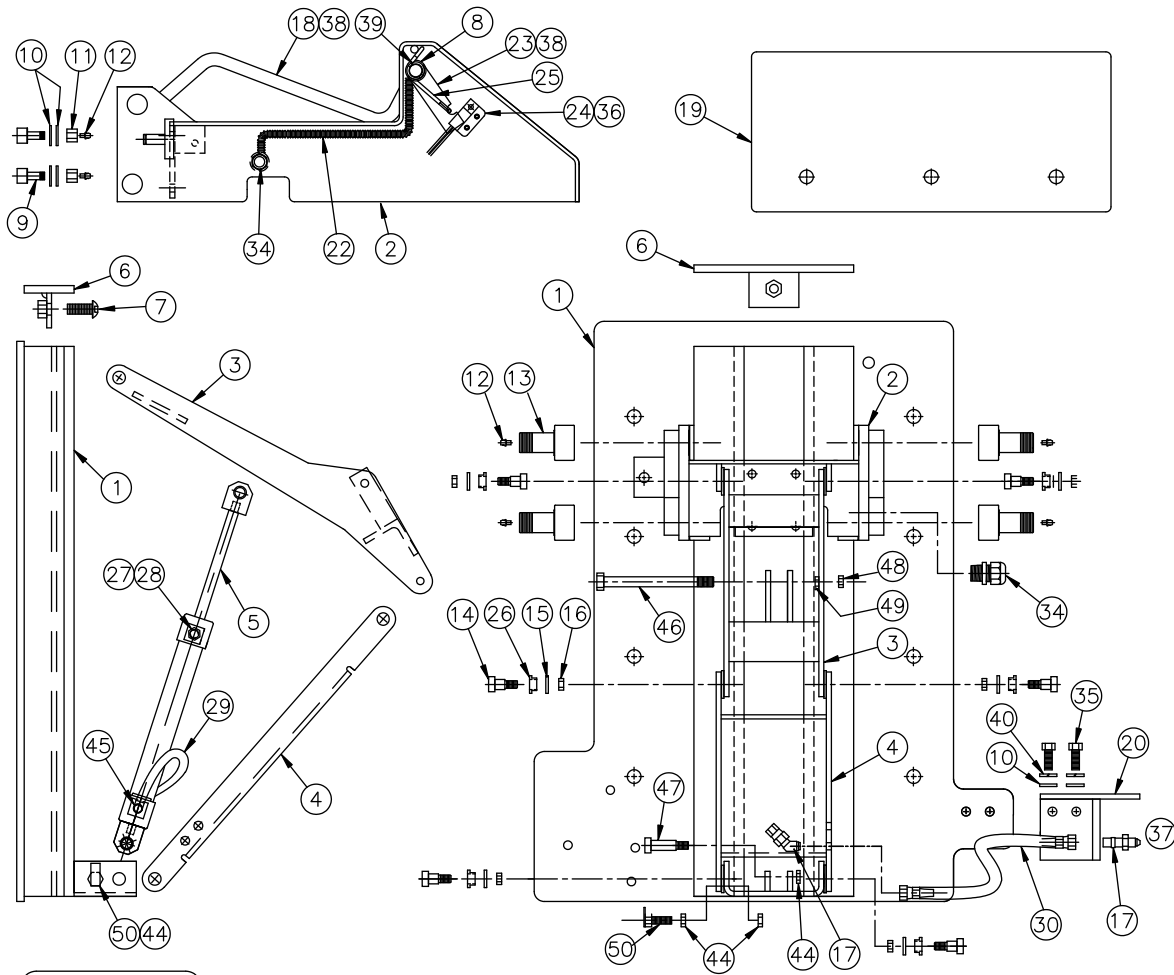

Item	Qty	Description / Model	P/N	Note
1	1	Back Plate Weldment	52-0158	
2	1	Hook Weldment	52-0102	
3	1	Triangle Arm Weldment	52-0157	
4	1	Tension Arm	53-0123	

Item	Qty	Description / Model		P/N	Note
5	1	Hydraulic Cylinder, ATL	Cylinder only.....	C1-0079	
		Series Restraint	C/w Breather, Adapter.....	C1-0091	
6	1	Stop Plate Weldment		52-0106	
7	1	Bolt, Button Head, 1/2" x 1 1/2" Stainless Steel		13-0966	
8	1	Pivot Bar Spacer Tube		53-0183	
9	4	Bearing Cam Follower, Ø3/4"		13-0915	
10	14	Washer, 3/8" SAE, ZP		13-0203	
11	4	Nut, 3/8"-24 x 1/2" Nylock, ZP		13-0969	
12	8	Grease Fitting, 3/16", Drive-in		13-0655	
13	4	Bearing, Cam Follower, Ø 1-3/4", Heavy Stud		13-0916	
14	6	Bolt, Shoulder, 1/2" x 1/2", ZP		13-0965	
15	6	Washer, Flat, 1/2", STD, ZP		13-0267	
16	6	Nut, Hex, Nylock Jam 3/8"-16		13-1331	
17	2	Fitting, Hydraulic (#4) 45 Degrees, Bulkhead		13-1170	
18	1	Sensor Bar Weldment, TL Series Restraint		52-0111	
19	1	Horizontal Shear Plate		53-0108	
20	1	Hose Mounting Bracket, ATL Series Restraint		52-0116	
21	11	Anchor, Concrete, Wedge, Ø5/8" x 5", ZP		13-0799	
22	1	Conduit, Flex, 1/4" x 14"		13-1159	
23	1	Sensor Bar Trip Plate, TL Series Restraint		52-0110	
24	1	Proximity Switch, N/O, 18" Wire Leads (P/C FP2000)		13-0985	
25	1	Torsion Sensor Bar Spring		23-0131	
26	6	Bushing, Flange, 1/2" ID x 5/8" OD x 3/8", Oilite		13-0953	
27	1	Breather, Sintered Bronze		13-1383	
28	1	Adapter, Str. 7/16 (4) MORB ¼ (4) FNPT		13-0489	
29	1	Hose, Hydraulic (1/8) x 6 3/4" Long		13-1232	
30	1	Hose, Hydraulic (#4) x 7 1/4" Long		52-0163	
31	1	Cable, Sensor, TL Series Restraint		53-0118	
32	1	Connector, 1/2" Threaded, Strain Relief, Nylon		13-0419	
33	1	Enclosure, Conduit Box, 4 x 4 PVC		13-2145	
34	1	Connector, 1/2" Threaded, Strain Relief, Aluminium		13-1013	
35	2	Bolt, 3/8" x 1"		13-0843	
36	1	Spacer, Plastic, 0.210" Thick		(c/w 24)	
37	1	Hose, Hydraulic (1/4) x 16' Long, SAE100 R1AT		52-0165	
38	2	Screw, Socket Head, 1/4"-28 x 1/2" Long, Plated		13-1175	
39	1	Sensor Bar Pivot Shaft, TL Series Restraint		53-0128	
40	2	Washer, Lock, 3/8"		13-0767	
41	1	Control Panel, LED lights		58-0159	
42	1	Outside Traffic Light, LED Red and Green		13-3282	
43	1	Sign, Outside Caution		23-0124	
44	3	Jam Nut, 3/8", plated		13-1021	
45	1	Fitting, Hydraulic (#4) 90° 7/16 MORB x 7/16 MJIC		13-0905	
46	1	Bolt, Hex Head, ½" x 5 1/2" long, plated		13-1638	
47	1	Shoulder Bolt, ½" x 1 ¼" long, 3/8" thread		13-1365	
48	1	Nut, Nylock 1/2"		13-0750	
49	1	Jam Nut, 1/2" plated		13-1639	
50	1	Sensor Activator Bolt		52-0119	
51	1	Pressure Switch, (not shown)		13-1835	